

Sand Filling Instructions

This product should not be used before filling it with the sand required by and as described in the sand filling instructions below and available at www.haworth.com/na/en/products/seating/lounge-chairs/kiss-lounge-chair.html. Follow these straightforward steps to purchase and add the sand. This process will help ensure your Kiss remains secure in various settings.

Materials Needed

- 50 lbs Play sand (dry)
- Funnel (optional)
- Furniture blanket or soft layer
- Sand scoop (we prefer using a Hellerware Mug)

Instructions

1. Once obtaining the appropriate materials specified in Section 1, prepare a place to flip your product upside down.
2. Turn your product upside down onto a soft, padded surface such as a furniture blanket to prevent scratching or damaging your product.
3. Locate the red plug on the bottom side of your product, which should now be facing upward.
4. Remove the sand plug by using your hand and pulling the plug straight out. It may be tight, and removal may require a bit of force.
5. Pour in sand evenly. If using a funnel, insert the funnel into the plug opening. Using a scoop, cup, or bag, slowly pour all the sand evenly into the plug opening using the amounts specified in Section 1. You may need to periodically shake the product to help evenly disperse the sand.
6. Shake product to evenly disperse sand. Once all the sand has been added, use 1–2 people to gently shake the product while it's on its back to evenly distribute the sand inside. Visually check to be sure that sand is evenly distributed, including through all product legs.
7. Insert sand plug and turn back over. Reinsert the sand plug into the opening. Verify plug is secure.
8. Using 1–2 people, carefully turn the product back over to its upright position.
9. Call customer service with questions at 877-429-6784
10. Inspect sand fill level regularly; refill if sand level lessens or sand gets moist or settles.

USING THE PRODUCT WITHOUT SAND OR WITHOUT PROPER SAND WEIGHTING CONSTITUTES MISUSE AND MAY VOID THE PRODUCT WARRANTY.

PRODUCT WARNING

| **⚠WARNING** | (Use Safety Orange background per ANSI Z535.1) |

TIP HAZARD: If not properly weighted with sand per product instructions, the product may be unstable.

POSSIBLE CONSEQUENCES: Tip-over may cause serious injury or property damage.

HOW TO AVOID THE HAZARD: This product must be properly weighted with clean, dry play sand before use. Failure to add the required sand creates a tip hazard during normal use.

- Do not use the product until all weight and filling instruction steps have been fully completed.
- Refer to the product sand filling instructions provided with the product for proper sand filling, required and weight, and safe-use conditions.