

Heller

Gehry Bench

Designed by Frank Gehry

Date 2004

Just as Gehry's architecture shows his ability to make the unbelievable believable, Gehry's furniture – which may not look comfortable – is surprisingly and wonderfully comfortable. This is the result of Gehry not allowing form alone to win; function is just as important. This collection brings happiness to a variety of spaces worldwide – from corporate offices to homes to resorts and beyond.

The most innovative furniture, created by the world's most celebrated architect. A group of three cubes, a bench, easy chair, coffee table/sitting unit, and sofa, in silver/grey. Beautiful and functional, this furniture creates a stunning group indoors and outdoors.

Molded Bench appropriate for indoor/outdoor commercial, institutional and residential use.



HEIGHT 16.75"

WIDTH 50"

DEPTH 19.68"

WEIGHT 30 lbs.

PACK 1 per carton/per color

MATERIAL 100% recyclable
rotational-molded polyethylene

MADE IN USA



Black



Blue



Green



Magenta



Red



Silver



White



Yellow

Sand Filling Instructions

This product should not be used before filling it with the sand required by and as described in the sand filling instructions below and available at www.haworth.com/na/en/products/seating/benches/gehry-bench.html. Follow these straightforward steps to purchase and add the sand. This process will help ensure your bench remains secure in various settings.

Materials Needed

- 100 lbs Play sand (dry)
- Funnel (optional)
- Furniture blanket or soft layer
- Sand scoop (we prefer using a Hellerware Mug)

Instructions

1. Once obtaining the appropriate materials specified in Section 1, prepare a place to flip your product upside down.
2. Turn your product upside down onto a soft, padded surface such as a furniture blanket to prevent scratching or damaging your product.
3. Locate the red plug on the bottom side of your product, which should now be facing upward.
4. Remove the sand plug by using your hand and pulling the plug straight out. It may be tight, and removal may require a bit of force.
5. Pour in sand evenly. If using a funnel, insert the funnel into the plug opening. Using a scoop, cup, or bag, slowly pour all the sand evenly into the plug opening using the amounts specified in Section 1. You may need to periodically shake the product to help evenly disperse the sand.
6. Shake product to evenly disperse sand. Once all the sand has been added, use 1–2 people to gently shake the product while it's on its back to evenly distribute the sand inside. Visually check to be sure that sand is evenly distributed, including through all product legs.
7. Insert sand plug and turn back over. Reinsert the sand plug into the opening. Verify plug is secure.
8. Using 1–2 people, carefully turn the product back over to its upright position.
9. Call customer service with questions at 877-429-6784
10. Inspect sand fill level regularly; refill if sand level lessens or sand gets moist or settles.

USING THE PRODUCT WITHOUT SAND OR WITHOUT PROPER SAND WEIGHTING CONSTITUTES MISUSE AND MAY VOID THE PRODUCT WARRANTY.

PRODUCT WARNING

| ⚠WARNING | (Use Safety Orange background per ANSI Z535.1) |

TIP HAZARD: If not properly weighted with sand per product instructions, the product may be unstable.

POSSIBLE CONSEQUENCES: Tip-over may cause serious injury or property damage.

HOW TO AVOID THE HAZARD: This product must be properly weighted with clean, dry play sand before use. Failure to add the required sand creates a tip hazard during normal use.

- Do not use the product until all weight and filling instruction steps have been fully completed.
- Refer to the product sand filling instructions provided with the product for proper sand filling, required and weight, and safe-use conditions.