

Heller

Limbo Chair

Designed by Hlynur Atlason

Date 2022

The Limbo Chair began with a request. "Design us a comfortable modern lounge chair," said Heller CEO John Edelman to Hlynur Atlason. The Icelandic designer responded with a statement-making chair that's not only supremely comfortable but also suitable for indoor-outdoor use, and sustainably made.

With a swooping, sculptural form that holds the body in a comfortable position, Limbo is a playful chair, "but we were very serious about how it's made," says Hlynur. "It took a lot of thinking, research, and testing to make it look this effortless." To ensure a circular lifecycle, Limbo is fully recyclable and made with a high percentage of recycled post-consumer plastic (the exact percentage varies by color, with black having the highest percentage). Limbo is available in a choice of warm, muted colors that harmonize with the natural environment.

Made in USA and 100% recyclable.



HEIGHT 27.5"

WIDTH 30"

DEPTH 28"

SEAT HEIGHT 16.75"

WEIGHT 18 lbs.



PACK 1 per carton/per color

MATERIAL Recycled plastic polyethylene blend.

MADE WITH WORRY FREE PLASTICS TECHNOLOGY

100% regenerative, end-of-life microplastic-free

INDOOR-OUTDOOR

MADE IN USA

U.S. DESIGN PATENT NO. D1,041,939 S



Bone

Grey

Sand

Cantaloupe

Terra Cotta



Black

Important Tips:

This product should not be used in commercial environments before anchoring to the ground with the manufacturer's anchor plates which should be installed per the below instructions found at <https://store.haworth.com/products/heller-limbo-chair>. Follow these straightforward steps to install anchor plates that will allow you to anchor your chair to ground.

Instructions

1. Carefully flip the Limbo Chair upside down so the feet (A, B, and D) are facing upward, as shown above.
2. Unscrew and remove all feet at positions A, B, and D by hand in a counter-clockwise direction.
3. Position the Anchor Plate over foot location A, ensuring it is oriented inward toward the center of the chair. Ensure the tapered hole on the anchor plate faces outward and is aligned with the chair's foot hole.
4. Insert the screw through the Anchor Plate hole and firmly tighten in a clockwise direction using the provided Allen key (as shown in the diagram).
5. Repeat steps 3–4 for positions B and D, ensuring each plate faces inward toward the chair's center.
6. Confirm all components are securely tightened and carefully return the chair to the upright position.
7. Consult with a qualified professional to determine the appropriate anchoring method and hardware for your specific floor or installation condition.

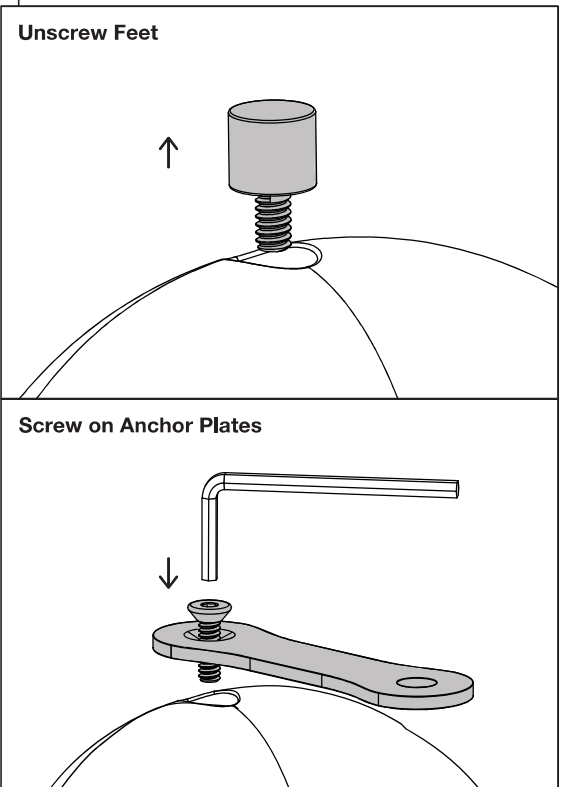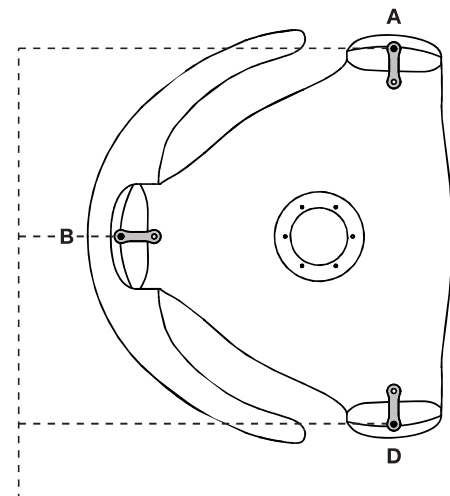

USING THE PRODUCT WITHOUT AN ANCHOR CONSTITUTES MISUSE AND MAY VOID THE PRODUCT WARRANTY.

PRODUCT WARNING

⚠ CAUTION

TIP HAZARD: Failure to properly anchor may result in product instability.

POSSIBLE CONSEQUENCES: Tip-over may cause serious injury or property damage.

HOW TO AVOID THE HAZARD: Install manufacturer's anchor plates and properly anchor the product before use. Failure to properly anchor the product creates a tip hazard during normal use.

- Do not use the product until all anchoring instruction steps have been fully completed.
- Refer to the product anchoring instructions provided with the product for proper anchoring and safe-use conditions.